

## **OPERATOR'S CABIN**

The opertor's cabin for both Siwertell continuous screw-type ship unloaders and for

Siwertell ship loaders of screw, belt and aeroslide design, is mounted on an arm at  $% \left( 1\right) =\left( 1\right) +\left( 1\right)$ 

the same level as the horizontal arm of the unloader/loader, the operator's cabin

slews along with the horizontal arm.

## **SCAN THE QR-CODE:**

And view the Page online, where you will have access to more information

