

OPERATOR'S CABIN

The opertor's cabin for both Siwertell continuous screw-type ship unloaders and for

Siwertell ship loaders of screw, belt and aeroslide design, is mounted on an arm at $% \left(1\right) =\left(1\right) +\left(1\right)$

the same level as the horizontal arm of the unloader/loader, the operator's cabin

slews along with the horizontal arm.

SCAN THE QR-CODE:

And view the Page online, where you will have access to more information

