



**SCAN THE QR-CODE:**  
And view the Page online,  
where you will have access  
to more information



## DUST FILTER

### DUST FILTER

A dust filter is installed at the top of the loading conveyor. It creates negative pressure and minimizes the risk of dust emissions at the transfer point where material leaves the unloader and enters the receiving equipment. It automatically returns the collected dust to the conveying system.



[Back to Road-mobilE UNLOADERS](#)